



Part # 12092350 1964-1966 Mustang Front CoilSpring



Recommended Tools



1964-1966 Mustang Front CoilSprings Installation Instructions

CoilSpring # 55490792 Installation

Front dual-rate spring will allow the vehicle to transition small road irregularities via a soft spring rate. When the vehicle compresses the spring far enough (through large bumps or cornering), it transitions to the firmer spring rate to control the bump or body roll. We have worked closely with Hyperco to develop custom dual rates to ensure the best ride possible.

The Front Control Arm Bushings and Strut Rod Bushings should be installed before installing spring. The Front Suspension should be assembled without the Shock installed.

1. CLOSE COILS TO THE BOTTOM.

2. With the OEM Spring Removed, insert the CoilSpring into the Pocket. SPECIAL ATTENTION NEEDS TO BE PLACED ON THE LOCATION OF THE ENDS OF THE SPRINGS TO MAKE SURE THEY ARE CLOKED CORRECTLY . The end of the CoilSpring will nest into the receiver area of the Spring Mount. If you line up the bottom, the top will be correct.

3. Pull down on the Control Arms and install the CoilSpring. Install the Shock to help hold the springs in place.

