





2021-2022 Ford Bronco
Rear Shock Mount Skid Plate
507AOR
Installation Instructions

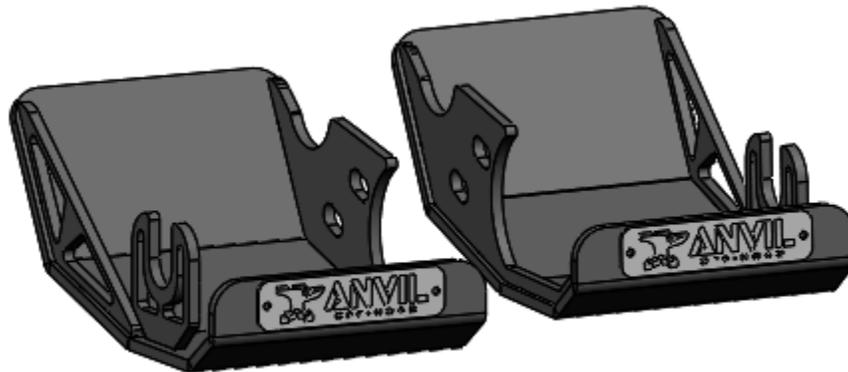

INCLUDED HARDWARE: BAGGED HARDWARE # 85R10531

Item #	Qty.	Description
5R2884	4	SCREW, FLANGED HEX HEAD M8 X 1.25 X 25
46R1599	4	WASHER, M8 SCREW SIZE, 8.4MM ID, 16MM OD
39R564	4	NUT, NYLON-INSERT LOCK, M8 X 1.25MM - 8 MM HIGH
199R12395	1	INSTRUCTION SHEET

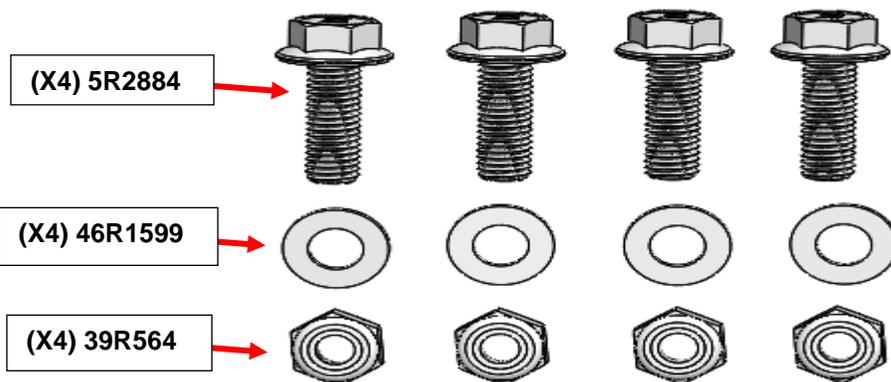

PRE-INSTALLATION:

Professional installation by a certified technician is strongly recommended. Not responsible for altered products. No claims are made regarding any lifting devices. Any and all claims implied in this document excluded.

RECOMMENDED TOOLS:

- Ratchet
- Torque Wrench
- 30MM Wrench
- 13MM Wrench
- 10MM Socket
- 27MM Socket

NOTES:

All pictures shown are for illustration purposes only. Actual product may vary due to product enhancement.

Does NOT fit Bronco Sport models.

INSTALLATION:

1. Lift the vehicle and secure on jack stand.
2. Install two extra jack stands under the bottom side of the rear axle for safety.
3. Loosen nut on right and left lower shock (**Figure 1**).

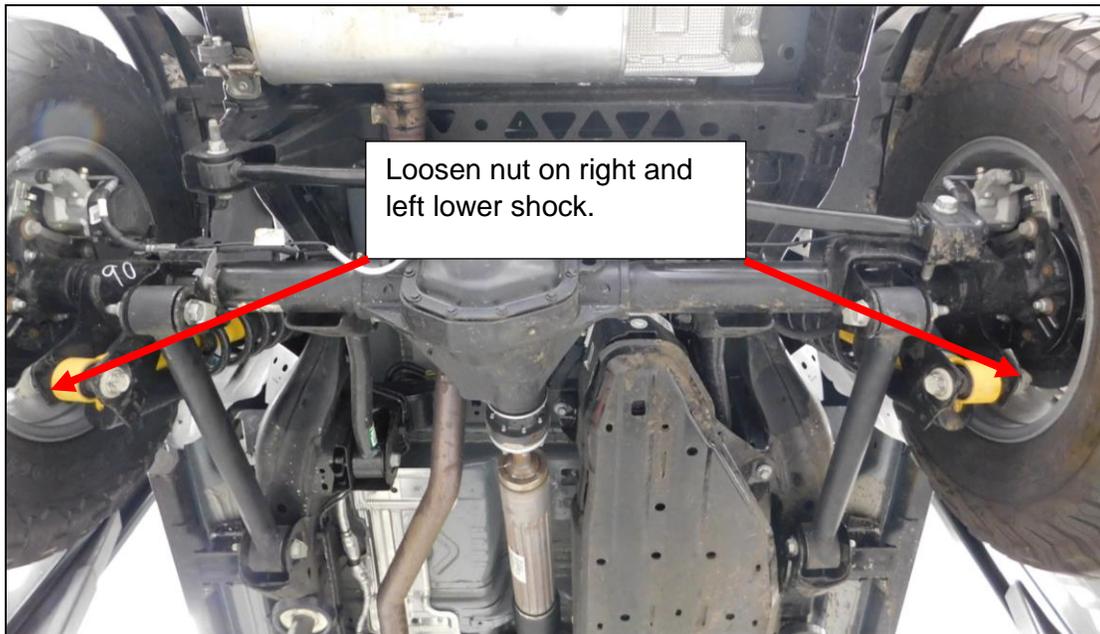


Figure 1

4. Install right and left side shock mount skid plate, slide over OEM bolt. Install supplied hardware. Adjust for proper fitment and torque bolts and nuts to factory specs (**Figures 2, 3, and 4**).



Figure 2



Figure 3



Figure 4

POST-INSTALLATION:

1. Check for proper torque on all fasteners. Check clearance between all rotating, mobile, fixed, and hot parts.

MAINTENANCE: After 500 miles, re-torque all fasteners (recommended every 1000 miles thereafter). Have all suspension, driveline, and steering components inspected by a certified technician during routine maintenance (recommended every 3000 miles).

Technical Support: 1-866-464-6553

© 2022 Anvil Off Road. All Rights Reserved. Tous Droits Réservés.

199R12395

Revision Date: 9-1-22